




To use the SPI interface, pull up the SEN pin. Otherwise pull down the SEN.

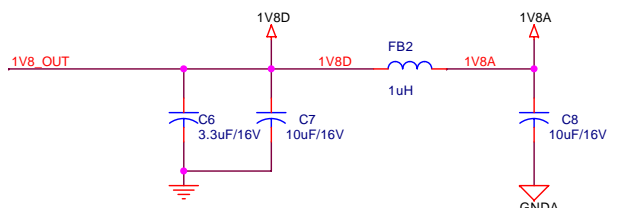

Place C6, C7, FB2 close to 1V8OUT and place C8 close to 1V8A

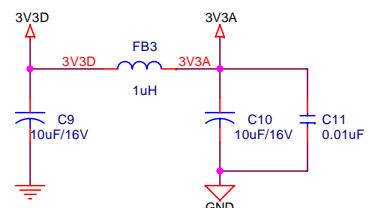

Place C9, FB3 close to 3V3D and place C10, C11 close to 3V3A

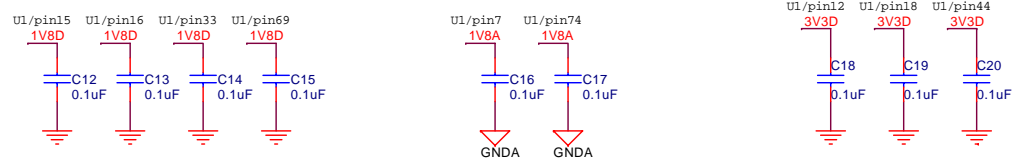

Place C12, C13, C14, C15, C16, C17, C18, C19, C20 as close to each power pin as possible.

Title		
W5100 Reference schematic		
Size	Document Number	Rev
B	<Doc>	2.1
Date:	Thursday, December 17, 2009 1	of 1